

ISS-102

**Low Power GX1 MMX
with SVGA/LCD,
Ethernet, SBC.**

User Manual

Version 1.2

August 20, 2003



©2003 Copyright by ICP Electronics Inc. All rights Reserved.

Copyright Notice

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Trademarks

ISS-102 is a registered trademark of ICP Electronics Inc. IBM PC is a registered trademark of International Business Machines Corporation. Intel is a registered trademark of Intel Corporation. Other product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies

Table of Contents

CHAPTER 1 INTRODUCTION.....	6
1.1 SPECIFICATIONS	7
1.2 PACKAGE CONTENTS	9
CHAPTER 2. INSTALLATION	10
2.1 ISS-102 BLOCK DIAGRAM & BOARD LAYOUT.....	10
2.2 UNPACKING PRECAUTIONS.....	13
2.3 SYSTEM MEMORY DRAM	13
2.4 WATCH-DOG TIMER SETTING	13
2.5 CLEAR CMOS SETUP	14
2.6 LCD VCC VOLTAGE SELECTOR	14
2.7 DISKONCHIP™ FLASH DISK MEMORY ADDRESS SETTING ..	15
2.8 COMPACT FLASH SETTING	15
CHAPTER 3. CONNECTION.....	16
3.1 FLOPPY DISK DRIVE CONNECTOR.....	16
3.2 PCI E-IDE DISK DRIVE CONNECTOR	17
3.3 COMPACT FLASH CONNECTOR.....	18
3.4 PARALLEL PORT	19
3.5 SERIAL PORTS	19
3.6 KEYBOARD CONNECTOR & MOUSE CONNECTOR	20
3.7 USB PORT CONNECTOR	21
3.8 IRDA INFRARED INTERFACE PORT.....	21
3.9 VGA CONNECTOR	22
3.10 LAN RJ45 CONNECTOR	22

3.11	LCD INTERFACE CONNECTOR	23
3.12	EXTERNAL POWER CONNECTOR	25
3.13	LEDS DISPLAY CONNECTOR	25
3.14	DIGITAL I/O (CN14).....	25
3.15	POWER RESET (CN3,CN18)	26
3.16	ATX POWER CONTROL (CN4)	27
3.17	DEBUGGING PORT (CN15)	27

CHAPTER 4. AWARD BIOS SETUP..... 28

4.1	GETTING START	28
4.2	STANDARD CMOS SETUP.....	28
4.3	BIOS FEATURES SETUP	30
4.4	CHIPSET FEATURES SETUP	31
4.5	POWER MANAGEMENT SETUP.....	32
4.6	PNP / PCI CONFIGURATION.....	33
4.7	LOAD BIOS DEFAULTS.....	34
4.8	LOAD SETUP DEFAULTS	35
4.9	INTEGRATED PERIPHERALS	36
4.10	SUPERVISOR PASSWORD AND USER PASSWORD ..	37
4.11	IDE HDD AUTODETECTION	37
4.12	SAVE & EXIT SETUP.....	38
4.13	EXIT WITHOUT SAVING.....	39

CHAPTER 5. SVGA SETUP	40
5.1 INTRODUCTION.....	40
5.2 FURTHER INFORMATION	41
CHAPTER 6. PCI BUS ETHERNET INTERFACE	42
6.1 INTRODUCTION.....	42
APPENDIX A. WATCHDOG TIMER	43
APPENDIX B. I/O ADDRESS MAP	46

Chapter 1 Introduction

ISS-102 with 3 Ethernet controller is designed for Network applications. It supports the full functions of an AT-compatible industrial computer on a single board. The ISS-102 is equipped with a low-power consumption and high performance GX1 processor on board. It also contains an SDRAM SODIMM socket that can support up to 512MB memory.

The ISS-102 provides three Ethernet interface, socket for DiskOnChip, EIDE interface, Compact Flash Type II, one parallel port, two serial ports RS232, two USB ports, and a mini-Din PS/2 keyboard, and a mini-Din PS/2 mouse interface. The built-in SVGA/LCD display controller supports both the CRT and LCD display simultaneously. It offers the resolutions of LCD screen up to 1024 x 768 and CRT resolutions up to 1280 x 1024 @ 256 colors. The Flash ROM contains both the system BIOS and the VGA BIOS. Reprogramming the Flash ROM could do the modification, in case of necessary.

1.1 Specifications

- **NS 233/266/300 MMX 32-Bit x86 Processor:**
 - ✓ Supports Intel MMX instruction set extension for the acceleration of multi media applications
 - ✓ 16 KB unified L1 cache
 - ✓ Five-stage pipelined integer unit
 - ✓ Integrated Floating Point Unit (FPU)
- **System Memory:** One 144-pin SODIMM socket support up to 512 MB SDRAM
- **BIOS:** AWARD 256 KB Flash memory
- **Display Controller:** MediaGx processor has applied the UMA technology that provides 1.5-4MB display memory, to be set up by BIOS
 - ✓ Support CRT and TFT LCD displays simultaneously
 - ✓ Support 18-bit TFT LCD panel resolution up to 1024x768 @ 18bpp
 - ✓ Support non-interlaced CRT monitors resolutions up to 1280x1024 @ 256 colors or 1024x768 @ 16bpp
- **IDE Interface:** The IDE supports four PCI Enhanced IDE hard disk drives.
- **Compact Flash Disk:** The Compact Flash Storage Card also runs in true IDE mode that is compatible with an IDE disk drive. It can be used with a passive adapter in a Type II socket.
- **FDD Interface:** Support up to two floppy disk drives, 5.25"(360KB and 1.2MB)and/or 3.5"(720KB, 1.44MB, and 2.88MB)
- **Serial Ports:** Two RS232 ports

- **Parallel Port:** One Parallel port, supports SPP/EPP/ECP mode
- **PS/2 Mouse/Keyboard Connector:** Two mini-Din connector is located on the mounting bracket for easy connection to a PS/2 keyboard and PS/2 mouse
- **USB Interface:** Two USB ports, USB 1.0 compliant
- **Power Management:**
 - ✓ Supports power saving modes including Normal/Doze/Sleep modes.
 - ✓ APM1.1 compliant
- **Watchdog Timer:**
 - ✓ Can be set to 1-255 seconds per period.
 - ✓ Reset or NMI was generated when CPU did not periodically trigger the timer
- **10/100Mbps Ethernet Controller:**
 - ✓ Three Realtek RTL8139/Intel GD82559 IEEE802.3 10/100M BASE-T standard Dual auto-sensing interface to 10MBps or 100MBps networks.
 - ✓ On board RJ45 connectors provide for easy connection.
- **DiskOnChip™ Flash Disk:** Supports one 32-pin socket for DiskOnChip Flash Disk
- **4 Digital Inputs and 4 Digital Outputs**
- **Power supply:** +5V(4.75V to 5.25V) @1.8A (typical)
- **Operating temperature:** -20-60°C (-4-140°F)
- **Dimension:** 7.6" (L) x 5.6" (W) (192mmx140mm)

1.2 Package Contents

Before you begin installing the product, please check the following materials are included in the package:


- One ISS-102 All-in-one single board computer
- One CD disk for utility and drivers
- One 2.5" IDE flat cable (40-pin 2.54mm pitch to 40-pin 2.54mm pitch)
- One serial port cable (RS-232)
- One floppy cable (for 3.5" FDD only)
- One standard D25 connector for parallel cable

If any of these items are missing or damaged, contact your distributor or sales representative immediately.

Chapter 2. Installation


This chapter gives instructions about how to set up the ISS-102 hardware, including directions on how to set jumpers and connect peripherals, switches and indicators. Before installation, please pay attention to the unpacking precautions on the following page to ensure safety.

2.1 ISS-102 Block Diagram & Board

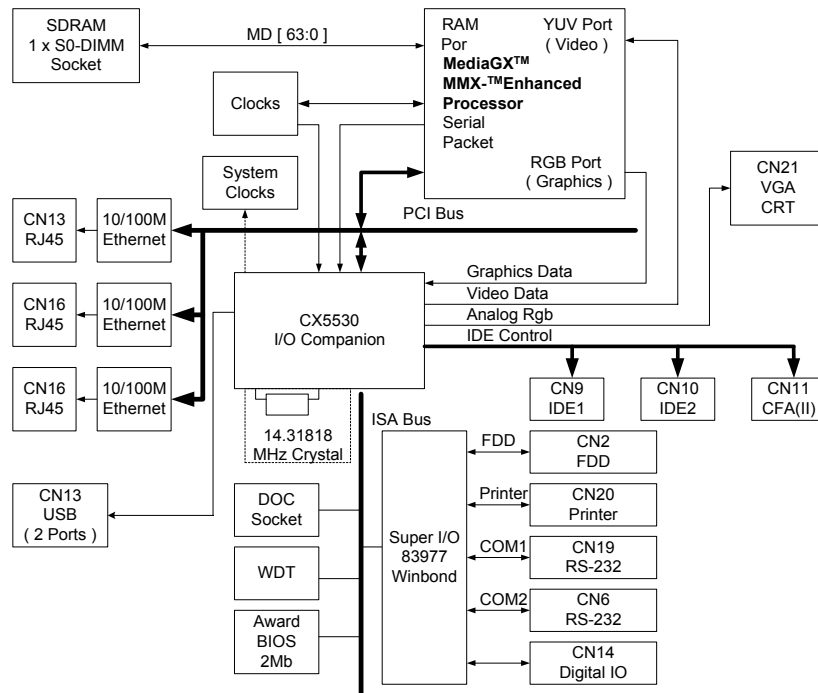


ISS-102 Block diagram

Layout

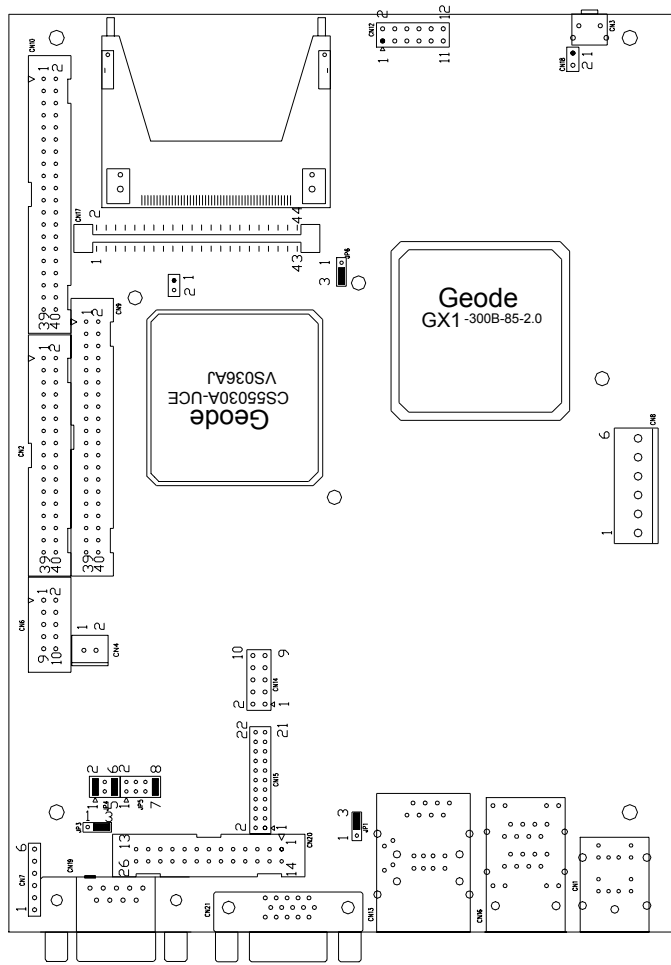

ISS-102 Board Layout

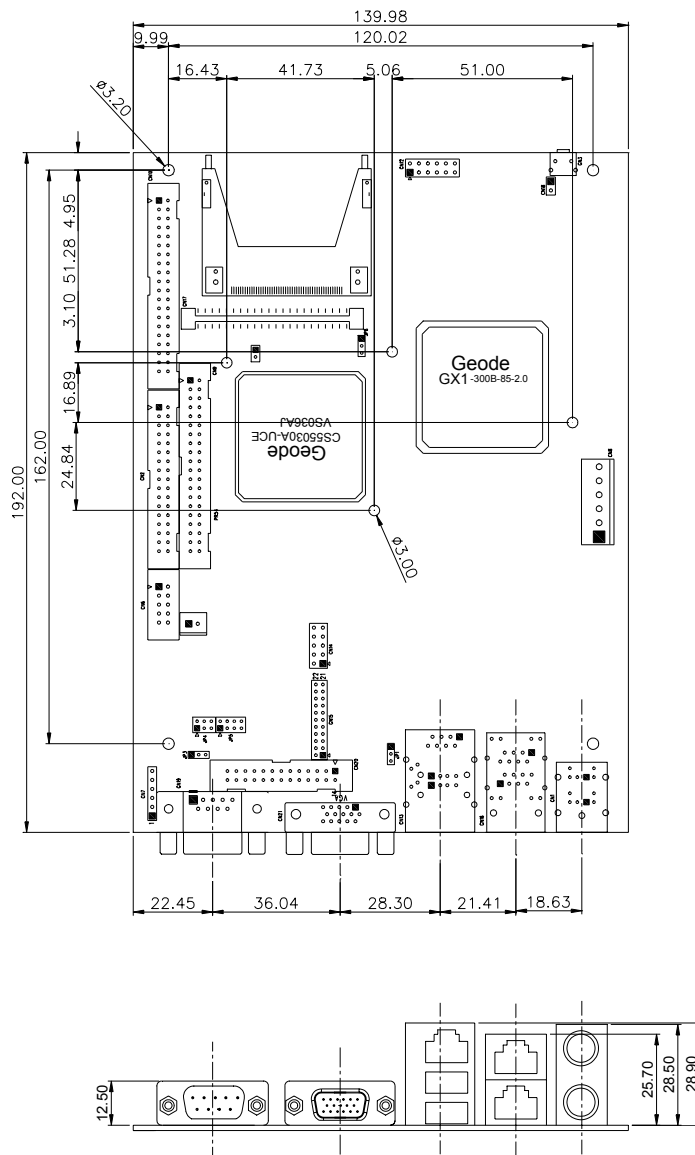

2.2 Unpacking Precautions

Some components of ISS-102 SBC are very sensitive to static electric charges and can be damaged by a sudden rush of power. To protect it from unintended damage, be sure to follow these precautions carefully:

1. Ground yourself to remove any static charge before touching the ISS-102 SBC. You can do it by using a grounded wrist strap at all times or by frequently touching any conducting materials that is connected to the ground.
2. Handle your ISS-102 SBC by its edges. Don't touch IC chips, leads or circuitry if not necessary.
3. Do not plug any connector or jumper while the power is on.

2.3 System Memory DRAM

There is one 144-pin SO-DIMM socket to accept 3.3V non-buffered SDRAM. The maximum memory size supported is 512MB.

2.4 Watch-Dog Timer Setting

Reading port 443H enables the Watchdog Timer. It should be triggered before the time-out period ends, otherwise it will assume the program operation is abnormal and will issue a reset signal to start again. Reading port 043/843H disables the Watchdog Timer. Please refer to Appendix A for detailed information.

- **JP3: Watchdog Active Type Setting**

JP3	DESCRIPTION
1-2	DISABLE WDT
2-3	RESET WHEN \ 'DT TIME-OUT

2.5 Clear CMOS Setup

If you need to clear the CMOS Setup (for example you have forgotten the password, you should clear setup and then reset the password.), you should close JP1 for about 3 seconds, then open it again. Open JP1 will set system back to normal operation mode.

- **JP1: Clear CMOS Setup (Reserve Function)**

JP1	DESCRIPTION
1-2	Normal Operation
2-3	Clear CMOS Setup

2.6 LCD Vcc Voltage Selector

The LCD interface connector JP6 can provide 5V or 3.3V power supply. You can select the most suitable setting of JP6 to meet the requirements of different types of LCDs.

JP6	DESCRIPTION
1-2	5V
2-3	3.3V

2.7 DiskOnChip™ Flash Disk Memory Address Setting

The DiskOnChip™ Flash Disk Chip (DOC) is produced by M-Systems. Since the DOC is 100% compatible to hard disk and DOS, users don't need to install any extra software utility. "Plug and play" function is not only easy but also reliable. Right now DOC is available from 2MB to 144MB. For MD-2200-Xmb series DOC will share only 8KB memory address.

• JP4 & JP5: DiskOnChip Memory Address Setting

ADDRESS	JP5				JP4		
	1-2	3-4	5-6	7-8	1-2	3-4	5-6
CC000	OPEN	OPEN	CLOSE	OPEN	OPEN	CLOSE	CLOSE
CE000	OPEN	OPEN	OPEN	CLOSE	OPEN	CLOSE	CLOSE
D0000	CLOSE	OPEN	OPEN	OPEN	CLOSE	OPEN	CLOSE
D2000	OPEN	CLOSE	OPEN	OPEN	CLOSE	OPEN	CLOSE
D4000	OPEN	OPEN	CLOSE	OPEN	CLOSE	OPEN	CLOSE
D6000	OPEN	OPEN	OPEN	CLOSE	CLOSE	OPEN	CLOSE
D8000	CLOSE	OPEN	OPEN	OPEN	OPEN	OPEN	CLOSE
DA000	OPEN	CLOSE	OPEN	OPEN	OPEN	OPEN	CLOSE
DC000	OPEN	OPEN	CLOSE	OPEN	OPEN	OPEN	CLOSE
DE000	OPEN	OPEN	OPEN	CLOSE	OPEN	OPEN	CLOSE

2.8 Compact Flash Setting

Set the operating mode of CompactFlash disk. This is similar to the operation of hard disks.

JP2	DESCRIPTION
OPEN	SLAVE
CLOSE	MASTER

Chapter 3. Connection

This chapter describes how to connect peripherals, switches and indicators to the ISS-102 board.

3.1 Floppy Disk Drive Connector (CN2)

ISS-102 board is equipped with a 34-pin daisy-chain driver connector cable.

• CN2: FDC CONNECTOR

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GROUND	2	REDUCE WRITE
3	GROUND	4	N/C
5	GROUND	6	N/C
7	GROUND	8	INDEX#
9	GROUND	10	MOTOR ENABLE A#
11	GROUND	12	DRIVE SELECT B#
13	GROUND	14	DRIVE SELECT A#
15	GROUND	16	MOTOR ENABLE B#
17	GROUND	18	DIRECTION#
19	GROUND	20	STEP#
21	GROUND	22	WRITE DATA#
23	GROUND	24	WRITE GATE#
25	GROUND	26	TRACK 0#
27	GROUND	28	WRITE PROTECT#
29	GROUND	30	READ DATA#
31	GROUND	32	SIDE 1 SELECT#
33	GROUND	34	DISK CHANGE#

3.2 PCI E-IDE Disk Drive Connector

For IDE HDD connection, ISS-102 was designed with two 2.54mm connector (CN9,CN10), which could be converted to four 2.54mm standard IDE connector via proprietary cable. Using this cable, you can attach up to four IDE hard disk drives to the ISS-102.

• CN9,CN10: Primary IDE Interface Connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	RESET#	2	GROUND
3	DATA 7	4	DATA 8
5	DATA 6	6	DATA 9
7	DATA 5	8	DATA 10
9	DATA 4	10	DATA 11
11	DATA 3	12	DATA 12
13	DATA 2	14	DATA 13
15	DATA 1	16	DATA 14
17	DATA 0	18	DATA 15
19	GROUND	20	N/C
21	IDE DRQ	22	GROUND
23	IOW#	24	GROUND
25	IOR#	26	GROUND
27	IDE CHRDY	28	GROUND
29	IDE DACK	30	GROUND-DEFAULT
31	INTERRUPT	32	N/C
33	SA1	34	N/C
35	SA0	36	SA2
37	HDC CS0#	38	HDC CS1#
39	HDD ACTIVE#	40	GROUND
41	VCC	42	VCC
43	GROUND	44	N/C

3.3 Compact Flash Connector

You can attach one Compact Flash Disk to CN11, which occupy the Secondary IDE channel. CN11 supports both the TYPE II and TYPE I module.

•CN11: Compact Flash Connector (Secondary IDE)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GROUND	26	VCC-IN CHECK1
2	DATA 3	27	DATA 11
3	DATA 4	28	DATA 12
4	DATA 5	29	DATA 13
5	DATA 6	30	DATA 14
6	DATA 7	31	DATA 15
7	HDC_CS0#	32	HDC_CS1
8	N/C	33	N/C
9	GROUND	34	IOR#
10	N/C	35	IOW#
11	N/C	36	N/C
12	N/C	37	INTERRUPT
13	VCC_COM	38	VCC_COM
14	N/C	39	CSEL
15	N/C	40	N/C
16	N/C	41	HDD_RESET
17	N/C	42	IORDY
18	SA2	43	N/C
19	SA1	44	VCC_COM
20	SA0	45	HDD_ACTIVE#
21	DATA 0	46	N/C
22	DATA 1	47	DATA 8
23	DATA 2	48	DATA 9
24	N/C	49	DATA 10
25	VCC-IN CHECK2	50	GROUND

3.4 Parallel Port

This port is usually connected to a printer. The ISS-102 includes an on-board parallel port (CN20).

• **CN20: Parallel Port Connector**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	STROBE#	2	DATA 0
3	DATA 1	4	DATA 2
5	DATA 3	6	DATA 4
7	DATA 5	8	DATA 6
9	DATA 7	10	ACKNOWLEDGE
11	BUSY	12	PAPER EMPTY
13	PRINTER SELECT	14	AUTO FORM FEED #
15	ERROR#	16	INITIALIZE
17	PRINTER SELECT LN#	18	GROUND
19	GROUND	20	GROUND
21	GROUND	22	GROUND
23	GROUND	24	GROUND
25	GROUND	26	N/C

3.5 Serial Ports

The ISS-102 offers two high speeds NS16C550 compatible UARTs with Read/Receive 16 byte FIFO serial ports. These ports let you connect to serial devices or a communication network. ISS-102 also provides one 9-pin D-SUB header and one 10-pin header. Detailed pin assignments of the connectors are specified in the following tables:

- **CN19: Serial Port1 Connector (9-pin D-SUB)**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DCD	2	DSR
3	RX	4	RTS
5	TX	6	CTS
7	DTR	8	RI
9	GND		

- **CN6: Serial Port2 Connector (10-pin 2.54mm Header)**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DCD	2	DSR
3	RX	4	RTS
5	TX	6	CTS
7	DTR	8	RI
9	GND	10	N/C

3.6 Keyboard Connector (CN1.Purple) & Mouse Connector (CN1.Green)

A mini-DIN connector (CN1) is located on the mounting bracket for easy connection to a PS/2 keyboard and PS/2 mouse.

- **CN1: Mini-DIN Keyboard**

PIN NO.	DESCRIPTION
1	KEYBOARD DATA
2	N/C
3	GROUND
4	+5V
5	KEYBOARD CLOCK

6	N/C
---	-----

- **CN1: Mini-DIN Mouse**

PIN NO.	DESCRIPTION
1	MOUSE DATA
2	N/C
3	GROUND
4	+5V
5	MOUSE CLOCK
6	N/C

3.7 USB Port Connector

The ISS-102 provides two USB interfaces, which give the completed plug and play, for up to 127 external devices.

- **CN13: Internal USB Connector**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	USBVCC1	1	USBVCC2
2	D1F+	2	D2F+
3	D1F-	3	D2F-
4	USBGND1	4	USBGND2

3.8 IrDA Infrared Interface Port

The ISS-102 built-in an IrDA port which supports Serial Infrared (SIR) or Amplitude Shift Keyed IR (ASKIR) interface. When use the IrDA port have to set SIR or ASKIR model in the BIOS's Peripheral Setup's COM2. Then the normal RS-232 COM2 will be disabled.

- **CN7: IrDA connector**

PIN NO.	DESCRIPTION
1	VCC
2	FIRRX
3	IRRX
4	GROUND
5	IR-TX
6	CIR

3.9 VGA Connector

The ISS-102 built-in 15-pin VGA connector accepts the CRT monitor.

- **CN21: 15-pin Female Connector**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	RED	9	NC
2	GREEN	10	GROUND
3	BLUE	11	NC
4	NC	12	DDCDAT
5	GROUND	13	HSYNC
6	GROUND	14	VSYNC
7	GROUND	15	DDCCLK
8	GROUND		

3.10 LAN RJ45 Connector

The ISS-102 has three built-in RJ45 LAN connectors for 10/100Mbps Ethernet.

• **CN13, CN16: LAN RJ45 Connector**

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	TX+	6	N/C
2	TX-	7	RX-
3	RX+	8	N/C
4	N/C	9	N/C

3.11 LCD Interface Connector

The ISS-102 provides a 2x22-pin connector for the LCD flat panel interface.

The ISS-102 comes to support TFT LCD panels at the following display options: (This is a reference table only, may support more type panels)

Video Display Type	Resolution	Example
TFT VGA	640x480, 64K Color, 18bits	Toshiba LTM10C209A
TFT SVGA	800x600, 64K Color, 18bits	Toshiba LTM12C275A
TFT XVGA	1024x768, 64K Color, 18bits	NEC NL10276AC30-04R

The TTL signal connecting interfaces located on CN17. The display options need to be setup manually using BIOS. The BIOS "**Integrated Peripheral**" Setup will allow you to choose display resolution either 640x480 or 800x600 or 1024x768.

- **CN17: LCD Interface Connector – only support up to 24 bit LCD. For better display quality, the total length of LCD cable should be shorter than 35 cm.**

PIN NO.	Description	PIN NO.	Description
1	+12V	2	+12V
3	GND	4	GND
5	+5V	6	+5V
7	FPVEE	8	GND
9	GND	10	GND
11	BLUE0	12	BLUE1
13	BLUE2	14	BLUE3
15	BLUE4	16	BLUE5
17	GND	18	GND
19	GREEN0	20	GREEN0
21	GREEN2	22	GREEN2
23	GREEN4	24	GREEN4
25	GND	26	GND
27	RED0	28	RED1
29	RED2	30	RED3
31	RED4	32	RED5
33	GND	34	GND
35	SHFCLK	36	FLM
37	M	38	LP
39	GND	40	ENABLK
41	GND	42	N/C
43	+5V	44	5V

3.12 External Power Connector

The ISS-102 has an on-board external power connector CN8. You can connect power directly to the CPU board through this connector.

- **CN8: External Power Connector**

PIN NO.	DESCRIPTION
1	+12V
2	GROUND
3	GROUND
4	+5
5	+5VSB
6	PS_ON

3.13 LEDS display connector(CN12)

- **LEDS Setup**

PIN NO.	DESCRIPTION
1,2	5VSB
3,4	+5V
5,6	HDD
7,8	LAN(CN13)
9,10	LAN(CN16)
11,12	LAN(CN16)

3.14 Digital I/O

One characteristic of digital circuit is its fast response to high or low signal. This kind of response is highly needed for harsh and critical industrial operating environment. That's why we

design 4-bit digital inputs and 4-bit digital outputs on the ISS-102.

Digital Input and Output, generally, are control signals. You can use these signals to control external devices that needs On/Off circuit or TTL devices. The register address is 240H, 260H or 280H, which is selected in BIOS SETUP. You can read or write data to the selected address to enable the function of digital IO.

READ		WRITE	
Bit0	DIN0	Bit0	DO0
Bit1	DIN1	Bit1	DO1
Bit2	DIN2	Bit2	DO2
Bit3	DIN3	Bit3	DO3

• **CN14: Digital I/O**

PIN NO.	Signal Name	PIN NO.	Signal Name
1	GROUND	2	+5V
3	DO3	4	DO2
5	DO1	6	DO0
7	DIN3	8	DIN2
9	DIN1	10	DIN0

3.15 Power Reset

• **CN18: Power Reset**

PIN NO.	DESCRIPTION
1	RESET
2	GROUND

3.16 ATX Power control

- **CN4: ATX Power control**

PIN NO.	DESCRIPTION
1	ON/OFF
2	GROUND

3.17 Debugging Port

This port is used for debugging only.

- **CN15: Debugging Port**

PIN NO.	Signal Name	PIN NO.	Signal Name
1	SD0	2	+5V
3	SD1	4	SA0
5	SD2	6	SA1
7	SD3	8	SA2
9	SD4	10	SA3
11	SD5	12	SA4
13	SD6	14	SA5
15	SD7	16	SA6
17	N/C	18	SA7
19	IRSTDRV	20	IOW#
21	GROUND	22	AEN

Chapter 4. AWARD BIOS Setup

ISS-102 uses the AWARD PCI/ISA BIOS for system configuration. The AWARD BIOS setup program is designed to provide maximum flexibility in configuring the system by offering various options that may be selected to meet end-user requirements. This chapter is written to guide you so as to use these features properly.

4.1 GETTING START

When you turn on the power button, the BIOS will enter the Power-On-Self-Test routines. These routines will be executed for system test and initialization and system configuration verification. After the POST routines are completed, the following message appears:

" Hit DEL if you want to run SETUP"

To access AWARD BIOS SETUP UTILITY, press key. The following screen will be displayed at this time:

(Please refer to the following section 4.2)

4.2 STANDARD CMOS SETUP

The Standard CMOS Setup is used for basic hardware system configuration. The main function is for Date/Time setting and

Floppy/Hard Disk Drive setting. Please refer to the following screen for this setup.

ROM PCI/ISA BIOS (2A434I9F)
STANDARD CMOS SETUP
AWARD SOFTWARE, INC.

Date (mm:dd:yy) : Thu, Apr 26 2001								
Time (hh:mm:ss) : 11 : 25 : 55								
HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	MODE
Primary Master	: AUTO	0	0	0	0	0	0	AUTO
Primary Slave	: AUTO	0	0	0	0	0	0	AUTO
Secondary Master	: AUTO	0	0	0	0	0	0	AUTO
Secondary Slave	: AUTO	0	0	0	0	0	0	AUTO
Drive A : 1.44M, 3.5 in.								
Drive B : None								
Video : EGA/VGA								
Halt On : All,But Keyboard								
ESC : Quit		↑ ↓ → ← : Select Item			PU/PD/+/- : Modify			
F1 : Help		(Shift)F2 : Change Color						

- **To set the Date**, for example, press either the arrow or <Enter> button on your keyboard to select one of the fields (Month, Date or Year) then press either <PgUp> or <PgDn> to increase or decrease the value of that field. Do the same steps for Time setting.
- **For IDE hard disk drive setup**, please check the following possible setup procedure:
 1. Use the Auto setting for detection during boot-up.
 2. Use the IDE HDD AUTO DETECTION in the main menu; the computer will automatically detect the HDD specifications.

3. Manually enter the specifications by yourself from the "User" option.

Note:

If you need more information on any particular field, just highlight it then press <F1> button. A pop-up window will come out to give you more information on that field.

4.3 BIOS FEATURES SETUP

This BIOS Features Setup is designed for the 'fine tuning' of your system in order to improve its performance. As for normal operation, you don't have to change any default setting. The default setting is pre-set for most reliable operation.

ROM PCI/ISA BIOS (2A434I9F)
 BIOS FEATURES SETUP
 AWARD SOFTWARE, INC.

Virus Warning	: Disabled	Video BIOS Shadow	: Enabled
CPU Internal Cache	: Enabled	C8000-CBFFF Shadow	: Disabled
Quick Power On Self Test	: Enabled	CC000-CFFFF Shadow	: Disabled
Boot Sequence	: A,C,SCSI	D0000-D3FFF Shadow	: Disabled
Swap Floppy Drive	: Disabled	D4000-D7FFF Shadow	: Disabled
Boot Up Floppy Seek	: Enabled	D8000-DBFFF Shadow	: Disabled
Boot Up NumLock Status	: On	DC000-DFFFF Shadow	: Disabled
Boot Up System Speed	: High	Cyrix 6x86/MII CPUID	: Enabled
Gate A20 Option	: Fast		
Memory Parity Check	: Enabled		
Typeomatic Rate Setting	: Disabled		
Typeomatic Rate (Chars/Sec)	: 6		
Typeomatic Delay (Msec)	: 250		
Security Option	: Setup		
PCI/VGA Palette Snoop	: Disabled	ESC : Quit	↑↓+* : Select Item
OS Select For DRAM > 64MB	: Non-OS2	F1 : Help	PU/PD/+/- : Modify
Report No FDD For WIN 95	: Yes	F5 : Old Values (Shift)	F2 : Color
		F6 : Load BIOS Defaults	
		F7 : Load Setup Defaults	

4.4 CHIPSET FEATURES SETUP

This setup function works mostly on board's chipset. This option is used to change the chipset's configuration. Please, be careful in changing any default setting, otherwise the system will run unstable.

ROM PCI/ISA BIOS (2A434I9F)
CHIPSET FEATURES SETUP
AWARD SOFTWARE, INC.

SDRAM CAS latency Time : 3 T SDRAM Clock Ratio Div By : 4 16-bit I/O Recovery (CLK): 5 8-bit I/O Recovery (CLK): 5 USB Controller : Enabled USB Legacy Support : Disabled	 ESC : Quit ↑↓→← : Select Item F1 : Help PU/PD/+/- : Modify F5 : Old Values (Shift)F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults
--	---

- **SDRAM Clock Ratio Div By:** To select the operating clock of SDRAM module. If you have GX1-300 CPU on board, the ratio is set to 4, then the clock would be: $300 / 4 = 75$ MHz. In order to maintain the stability of CPU board, remember DO NOT set the clock above 80 MHz, although higher frequency means higher performance.

4.5 POWER MANAGEMENT SETUP

Power Management Setup helps user to handle the ISS-102 board's "green" function. This feature can shut down the video display and hard disk to save energy, for example. The power management setup screen is shown below:

ROM PCI/ISA BIOS (2A434I9F)
POWER MANAGEMENT SETUP
AWARD SOFTWARE, INC.

Power Management	: Disabled	IRQ1 (KeyBoard)	: ON
		IRQ3 (COM 2)	: OFF
	** PM Timers **	IRQ4 (COM 1)	: OFF
Doze Mode	: Disabled	IRQ5 (LPT 2)	: OFF
Standby Mode	: Disabled	IRQ6 (Floppy Disk)	: OFF
HDD Power Down	: Disabled	IRQ7 (LPT 1)	: OFF
MODEM Use IRQ	: NA	IRQ9 (IRQ2 Redir)	: OFF
Throttle Duty Cycle	: 33.3 %	IRQ10 (Reserved)	: OFF
		IRQ11 (Reserved)	: OFF
		IRQ12 (PS/2 Mouse)	: OFF
		IRQ13 (Coprocessor)	: OFF
		IRQ14 (Hard Disk)	: OFF
		IRQ15 (Reserved)	: OFF
		ESC : Quit	↑↓←→ : Select Item
		F1 : Help	PU/PD/+/- : Modify
		F5 : Old Values (Shift)	F2 : Color
		F6 : Load BIOS Defaults	
		F7 : Load Setup Defaults	

4.6 PNP / PCI CONFIGURATION

This menu is used to assign certain IRQ to your PNP/PCI devices manually.

ROM PCI/ISA BIOS (2A434I9F)
PNP/PCI CONFIGURATION
AWARD SOFTWARE, INC.

PNP OS Installed : No Resources Controlled By : Auto Reset Configuration Data : Disabled	PCI IRQ Activated By : Level
	ESC : Quit ↑↓+* : Select Item F1 : Help PU/PD/+/- : Modify F5 : Old Values (Shift)F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults

- **PNP OS Installed:** if you install Plug and Play operating system (OS), the OS will reassign the interrupt if you select *Yes* in this field. If you install a non-Plug and Play OS or if you want to prevent reassigning of interrupt settings, select *No* in this field.
- **Resources Controlled By:** select *Auto* if you want the computer to assign the IRQs automatically and vice versa.
- **Reset Configuration Data:** *Enable* this field means that you allow the configuration data to be reset.

- **IRQ-xx assigned to:** these fields show whether a PCI/ISA uses certain IRQ.

4.7 LOAD BIOS DEFAULTS

ROM PCI/ISA BIOS (2A434I9F)
CMOS SETUP UTILITY
AWARD SOFTWARE, INC.

STANDARD CMOS SETUP BIOS FEATURES SETUP CHIPSET FEATURES SETUP POWER MANAGEMENT SETUP PNP/PCI CONFIGURA LOAD BIOS DEFAULT	INTEGRATED PERIPHERALS SUPERVISOR PASSWORD USER PASSWORD IDE HDD AUTO DETECTION ETUP SAVING
<div style="border: 1px solid black; display: inline-block; padding: 2px;">Load BIOS Defaults (Y/N)? N</div>	
LOAD SETUP DEFAULTS	
Esc : Quit F10 : Save & Exit Setup	
↑ ↓ → ← : Select Item (Shift)F2 : Change Color	

If you select 'Y' to this field, the BIOS Defaults will be loaded except Standard CMOS SETUP. The default settings are not optimal and turning all high performance into disabled condition. Select 'N' to abort.

Suggestion: for the first time or for our primary user, we suggest you to use LOAD SETUP DEFAULTS because it is the safest mode for your system.

4.8 LOAD SETUP DEFAULTS

ROM PCI/ISA BIOS (2A434I9F)
CMOS SETUP UTILITY
AWARD SOFTWARE, INC.

STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	SUPERVISOR PASSWORD
CHIPSET FEATURES SETUP	USER PASSWORD
POWER MANAGEMENT SETUP	IDE HDD AUTO DETECTION
PNP/PCI CONFIGURATION	LOAD SETUP
LOAD BIOS DEFAULT	Load SETUP Defaults (Y/N)? N
LOAD SETUP DEFAULTS	SAVING
Esc : Quit	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	(Shift)F2 : Change Color

If you select 'Y' to this field, the Setup Defaults will be loaded except Standard CMOS SETUP. The default settings are optimal configuration settings for your system.

4.9 INTEGRATED PERIPHERALS

ROM PCI/ISA BIOS (2A434I9F)
INTEGRATED PERIPHERALS
AWARD SOFTWARE, INC.

IDE HDD Block Mode	: Enabled	Onboard Parallel Port	: 378/IRQ7
Primary IDE Channel	: Enabled	Parallel Port Mode	: SPP
Master Drive PIO Mode	: Auto		
Slave Drive PIO Mode	: Auto		
Secondary IDE Channel	: Enabled	Digital I/O	: 280h
Master Drive PIO Mode	: Auto		
Slave Drive PIO Mode	: Auto		
		Multiple Monitor Support	: M/B First
IDE Primary Master UDMA	: Auto	Video Memory Size	: 2.5 M
IDE Primary Slave UDMA	: Auto	Display status	: Both
IDE Secondary Master UDMA	: Auto	Flat Panel Resolution	: 800x600
IDE Secondary Slave UDMA	: Auto		
KBC input clock	: 8 MHz		
Onboard FDC Controller	: Enabled		
Onboard Serial Port 1	: 3F8/IRQ4		
Onboard Serial Port 2	: 2F8/IRQ3		
UART Mode Select	: Normal		

This option is used to assign Onboard I/O, IRQ, and DMA etc. If you don't know how to configure them, just press <F7> to load Setup Defaults.

- **Digital I/O Base Address -- 240H, 260H, 280H, Disabled**
To select the I/O address for digital I/O function.
- **Multiple Monitor Support -- No Onboard, PCI first, M/B first**
To select the primary VGA for multiple monitor support in WINDOWS.
- **Video Memory Size -- 1.5M, 2.5M, 4.0M**
To select the size of video memory. It makes use of system memory for display.

4.10 SUPERVISOR PASSWORD AND USER PASSWORD

Supervisor Password sets a password that is used to protect your system and Setup Utility. Supervisor Password has higher priority than User Password. Once you setup the password, the system will always ask you to key-in password every time you enter the BIOS SETUP. If you enter the BIOS SETUP with Supervisor Password, you can choose every setup/option on the main menu but with User Password, you can only choose three setup/options (USER PASSWORD, SAVE & EXIT SETUP and EXIT WITHOUT SAVING). To disable these passwords, enter the BIOS SETUP room with Supervisor Password and then just press the <Enter> key instead of entering a new password when the 'Enter Password' prompts pop-up.

Note: If you forget the password, do the Clear/Reset CMOS procedure (see Section 2.5 Clear CMOS Setup)

4.11 IDE HDD AUTODETECTION

This option detects the parameters of an IDE hard disk drive (HDD sector, cylinder, head, etc) automatically and will put the parameters into the Standard CMOS Setup screen. Up to 2 IDE drives can be detected and the parameters will be listed in the box. Press <Y> if you accept these parameters.

Press <N> to skip the next IDE drives.

Note: If your IDE HDD was formatted in previous older system, incorrect parameters may be detected. In this case, you need to enter the correct parameters manually or low-level format the disk

4.12 SAVE & EXIT SETUP

Select this option when you finish setting all the parameters and want to save them into the CMOS. Simply press <Enter> key and all the configuration changes will be saved.

```
ROM PCI/ISA BIOS (2A434I9F)
CMOS SETUP UTILITY
AWARD SOFTWARE, INC.
```

STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	SUPERVISOR PASSWORD
CHIPSET FEATURES SETUP	USER PASSWORD
POWER MANAGEMENT SETUP	IDE HDD AUTO DETECTION
PNP/PCI CONFIGURATION	SETUP
LOAD BIOS DEFAULT	SAVE to CMOS and EXIT (Y/N)? N
LOAD SETUP DEFAULTS	SAVING

```
Esc : Quit
F10 : Save & Exit Setup
↑ ↓ → ← : Select Item
(Shift)F2 : Change Color
```

4.13 EXIT WITHOUT SAVING

Select this option if you want to exit the Setup without saving the changes that you made. Just press <Enter> key and you will exit the BIOS SETUP without saving the changes.

```
ROM PCI/ISA BIOS (2A434I9F)
CMOS SETUP UTILITY
AWARD SOFTWARE, INC.
```

STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	SUPERVISOR PASSWORD
CHIPSET FEATURES SETUP	USER PASSWORD
POWER MANAGEMENT SETUP	IDE HDD AUTO DETECTION
PNP/PCI CONFIGURA	ETUP
LOAD BIOS DEFAULT	Quit Without Saving (Y/N)? N
LOAD SETUP DEFAULTS	SAVING
Esc : Quit	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	(Shift)F2 : Change Color

Chapter 5. SVGA Setup

5.1 Introduction

The ISS-102 is equipped with on-board VGA interface. The description below is its specifications and features:

5.1.1 Chipset

The ISS-102 uses a NS CX5530A chipset as its SVGA controller. It is compatible with many common 18-bit LCD displays and traditional analog CRT monitors. The VGA BIOS supports LCD. In addition, it also accepts interlaced and non-interlaced analog monitors (color and monochrome VGA) with high-resolution quality while maintaining complete IBM VGA compatibility. But digital monitors (i.e. MDA, CGA, and EGA) can be NOT supported. Multiple frequency (multisync) monitors are operated as if they were analog monitors.

5.1.2 Display memory

Having 1.5 ~ 4 MB UMA memory, the VGA controller can make CRT displays or color panel displays perform with resolutions up to 1024 x 768 at 64 K colors. The display memory can be modified up to 4 MB in BIOS for true-color resolution of 1024 x 768.

5.1.3 Display drivers

1. Win95, 98 drivers (VGA) in CD rom
 \ Vga \ MediaGX \
2. WinNT4.0 drivers in CD rom
 \ Vga \ MediaGX \ Nt40 \

5.2 Further Information

For more detailed information about the PCI/SVGA installation in your ISS-102, including driver updates, troubleshooting instructions, please refer to the following webs that provide some resources you may need. If you do not find the information you need, please contact with your local contributor or ICP support team:

ICP web site: www.ieiworld.com.tw

Chapter 6.

PCI Bus Ethernet Interface

6.1 Introduction

The ISS-102 provides three high performance 32-bit Ethernet chipset that is completely compliant with IEEE 802.3 100 Mbps CSMA/CD standards. It is both 100Base-T and 10Base-T compatible. The major network operating system fits it. The medium type can be set up via the RSET8139.exe program included on the utility CD.

The Ethernet port supplies three standard RJ-45 connectors on board. To utilize the network boot feature is by incorporating the boot ROM image files for the appropriate network operating system. The boot ROM BIOS files are combined with system BIOS, which can be enabled/disabled in the BIOS setup.

The 8139x utility tools are in the following directory of CD
rom \ Lan \ Realtek \ 8139c \

Appendix A. Watchdog Timer

The Watchdog Timer is a device to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMI or a software bug. When the CPU stops working normally, hardware on the board will perform hardware reset (cold boot) to bring the system back to a known state.

Three I/O ports control the Watchdog Timer.

443	Write	Set Watchdog Time period
443 (hex)	Read	Enable the refresh the Watchdog Timer
043/843 (hex)	Read	Disable the Watchdog Timer

Prior to enable the Watchdog Timer, user has to define Timer first. The output data is a value of time interval and the range of the value is from 01(hex) to FF (hex) and time interval 1 sec to 255 sec.

Data	Time Interval
01	1 sec
02	2 sec
03	3 sec
04	4 sec
.	.
.	.
.	.
FF	255 sec

This will enable and activate the countdown timer which will eventually time out and reset the CPU to ensure that this reset condition does not occur, the Watch-Dog Timer must be periodically refreshed by reading the same I/O port 043/843H and 443H. This must be done within the time out period that is selected by software, please refer to the example program.

A tolerance of at least 5% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time consuming. Therefore if the time-out period has been set to 10 seconds, the I/O port 443H must be read within 7 seconds.

Note: when exiting a program it is necessary to disable the Watchdog Timer, otherwise the system will reset.

Example assembly program:

```
TIMER_PORT = 443H
```

```
TIMER_START = 443H
```

```
TIMER_STOP = 843H
```

```
;;INITIAL TIME PERIOD COUNTER
```

```
MOV DX, TIME_PORT
```

```
MOV AL,8: ;;8 SECONDS
```

```
OUT DX,AL
```

```
;;ADD YOUR APPLICATION HERE
```

```
MOV DX, TIMER_START
IN AL, DX.    ;;START COUNTER

;ADD YOUR APPLICATION HERE
W_LOOP:
MOV DX, TIMER_STOP
IN AL, DX
MOV DX, TIMER_START
IN AL, DX.    ; RESTART COUNTER

; ADD YOUR APPLICATION HERE
CMP EXIT_AP, 0
JNE W_LOOP
MOV DX, TIMER_STOP
IN AL, DX
;;EXIT AP
```

Appendix B. I/O Address Map

B.1 System I/O Address Map

I/O Address Map	Description
000-00F	DMA controller #1
020-021	Interrupt controller # 1, master
022-023	Chipset address
040-043	System timer
060-060	Standard 101/102 keyboard controller
061-061	System speaker
064-064	Standard 101/102 keyboard controller
070-07F	Real time clock, NMI controller
080-0BF	DMA page register
0A0-0BF	Interrupt Controller # 2
0C0-0DF	DMA Controller # 2
0F0-0F0	Clear math coprocessor busy
0F1-0F1	Reset math coprocessor
0F8-0FF	Math coprocessor
1F0-1F7	BUS master PCI IDE controller
240/260/280	Digital I/O
278-27F	Reserved
2F8-2FF	Serial Port 2
378-37F	Parallel Printer Port 1
3B0-3DF	Cyrix Graphic Adapter
3F0-3F7	Floppy Disk Controller
3F8-3FF	Serial Port 1
443	Watch dog timer enable
043/843	Watch dog timer disable

Digital I/O address could be set to 240H,260H or 280H

B.2 DMA channel assignments

Channel	Function
0	Available
1	Available
2	Standard floppy disk controller
3	Parallel port*
4	Cascade for DMA controller 1
5	Available
6	Available
7	Available

* parallel port DMA default setting: DMA 3

parallel port DMA select: DMA 1 or 3

B.3 Interrupt assignments

Interrupt #	Interrupt source
NMI	Parity error detected
IRQ 0	System timer
IRQ 1	Keyboard
IRQ 2	Interrupt from controller 2 (cascade)
IRQ 3	Serial communication port 2
IRQ 4	Serial communication port 1
IRQ 5	Available
IRQ 6	Standard floppy disk controller
IRQ 7	Parallel port (print port)
IRQ 8	Real-time clock
IRQ 9	Available
IRQ 10	Available
IRQ 11	Available
IRQ 12	PS/2 mouse
IRQ 13	Numeric data processor
IRQ 14	Fixed primary IDE controller
IRQ 15	Fixed secondary IDE controller

Ethernet IRQ is automatic set by the system

B.4 1st MB memory map

Address	Description
F000h-FFFFh	System BIOS
EF00h-EFFFh	Expansion ROM*
C800h-EFFFh	Unused
C000h-C7FFh	VGA BIOS*
B000h-BFFFh	VGA DRAM
A000h-AFFFh	VGA DRAM
0000h-9FFFh	Base memory

* Default setting